




Remove Bolts 1 and 2

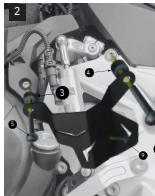

- . Insert Bush 3 and 4
- . put screws 5 and 6 on quickshifter
- . Also put screw 9 on L clamp from behind locking inside the slot as page 3 and 4.

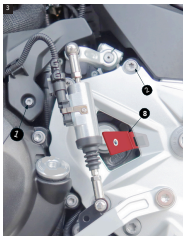

Put L clamp 8 from under the slot as shown in the image



Quickshifter Protector Instruction manual

MACHINA™